

SERVICE INDICATOR & WARNING LIGHTS

1992 Infiniti G20

1991-92 MAINTENANCE
Infiniti Service Indicator & Warning Lights

G20

SERVICE INDICATOR & WARNING LIGHTS

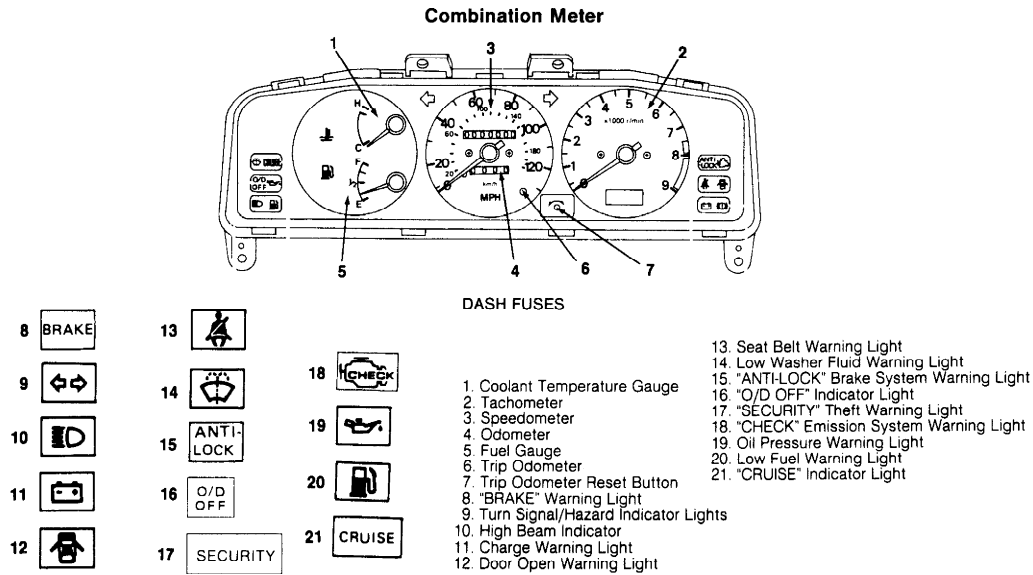


Fig. 1: Dash Gauges & Warning Lights
Courtesy of Nissan Motor Co., U.S.A.

OIL PRESSURE WARNING LIGHT

Light comes on with the ignition switch in the "ON" position as a bulb check, but should go out shortly after engine is started. If light remains on or comes on while driving, it indicates low oil pressure and possible system malfunction. Have the system checked and serviced immediately. Do not operate vehicle until cause is located and corrected. Light does not indicate amount of oil in engine.

"BRAKE" WARNING LIGHT

Light is designed to come on with the ignition switch in the "ON" position as a bulb check and goes out after engine is started. Light will also come on with the parking brake fully or partially engaged. If light does not come on as designed or comes on at any other time, it indicates possible fault in the electrical system or low brake fluid. Check brake fluid reservoir, add hydraulic brake fluid as necessary and have the system checked immediately. Do not continue driving if further trouble is experienced.

CHECK WARNING LIGHT

Light comes on with the ignition switch in the "ON" position as a bulb check and goes out after engine is started. If light remains on or comes on while driving, it indicates a potential emission control problem and the system should be checked and serviced promptly. Continued operation of vehicle in this condition without having the emission control system checked and serviced as necessary

may affect fuel economy, driveability and cause possible damage to the emission system.

"ANTI-LOCK" BRAKE WARNING LIGHT

Light is designed to come on with the ignition switch in the "ON" position and should go out shortly after engine is started. If light remains on or comes on while driving, it indicates a potential problem in the system and should be inspected as soon as possible. The regular braking system will still operate normally but without anti-lock function.

AIR BAG WARNING LIGHT (IF EQUIPPED)

Light should come on briefly (about 7 seconds) with the ignition switch in the "ON" position as a system check and goes out shortly after. If light does not come on as designed or comes on at any other time, it indicates a system malfunction and it should be checked and serviced immediately.

"CHARGE" WARNING LIGHT

If light comes on when the engine is running, it may indicate a possible malfunction in the charging system. The alternator belt may be loose or broken. If warning light comes, have the system checked and serviced promptly. DO NOT drive vehicle if alternator belt is loose or broken.

TURN SIGNAL/HAZARD INDICATOR LIGHTS

Light flashes when the turn signal switch lever or hazard switch is turned on.

HIGH BEAM INDICATOR LIGHT

Light comes on when the headlight high beam is on and goes out when the low beam is selected.

DOOR OPEN WARNING LIGHT

Light comes on when any of the doors (except the trunk lid) are not closed securely with ignition on.

SEAT BELT WARNING LIGHT

The light and chime is a reminder to fasten seat belts. Light flashes about 6 seconds with the ignition on. The chime will sound simultaneously unless driver's seat belt is securely fastened.

LOW WASHER FLUID WARNING LIGHT

Light comes on when the washer fluid level is low. Add washer fluid as necessary.

"O/D OFF" WARNING LIGHT

Light comes on when the overdrive switch is turned off.

"SECURITY" THEFT WARNING LIGHT

The theft warning system will activate when all doors, hood,

trunk lid and back door are locked and the ignition is off. Indicator light will glow for about 30 seconds and then go out, indicating the system has been activated. If door is unlocked or ignition key is turned to the "ACC" and/or "ON" positions during this 30 second interval, the system will not activate. If indicator light blinks, system is malfunctioning and will not activate.

LOW FUEL WARNING LIGHT

Light comes on when the fuel tank is almost empty.

"CRUISE" WARNING LIGHT

Light comes on if the vehicle is controlled by the cruise control system.