

TRANSMISSION SERVICING - M/T

1992 Infiniti G20

1991-92 Manual Transmission Servicing

G20

LUBRICATION

SERVICE INTERVALS

Inspect fluid level every 15,000 miles or 12 months. If under severe usage, change every 30,000 miles or 24 months.

CHECKING FLUID LEVEL

Transaxle

Fill plug is located on side of transaxle case. Lubricant level should be to bottom of fill hole. Add fluid if necessary.

RECOMMENDED FLUID

Use Hypoid SAE 75W-90 (API GL-4) gear oil.

FLUID CAPACITY

Fluid capacity is approximately 7 3/8-7 7/8 pts. (3.5-3.7L)

LINKAGE ADJUSTMENTS

NOTE: All models have floor shift mechanisms without external linkage and require no adjustment.

TORQUE SPECIFICATIONS

TORQUE SPECIFICATIONS

Application	Ft. Lbs. (N.m)
Drain Plug	18-25 (25-34)
Filler Plug	7-14 (10-20)
